

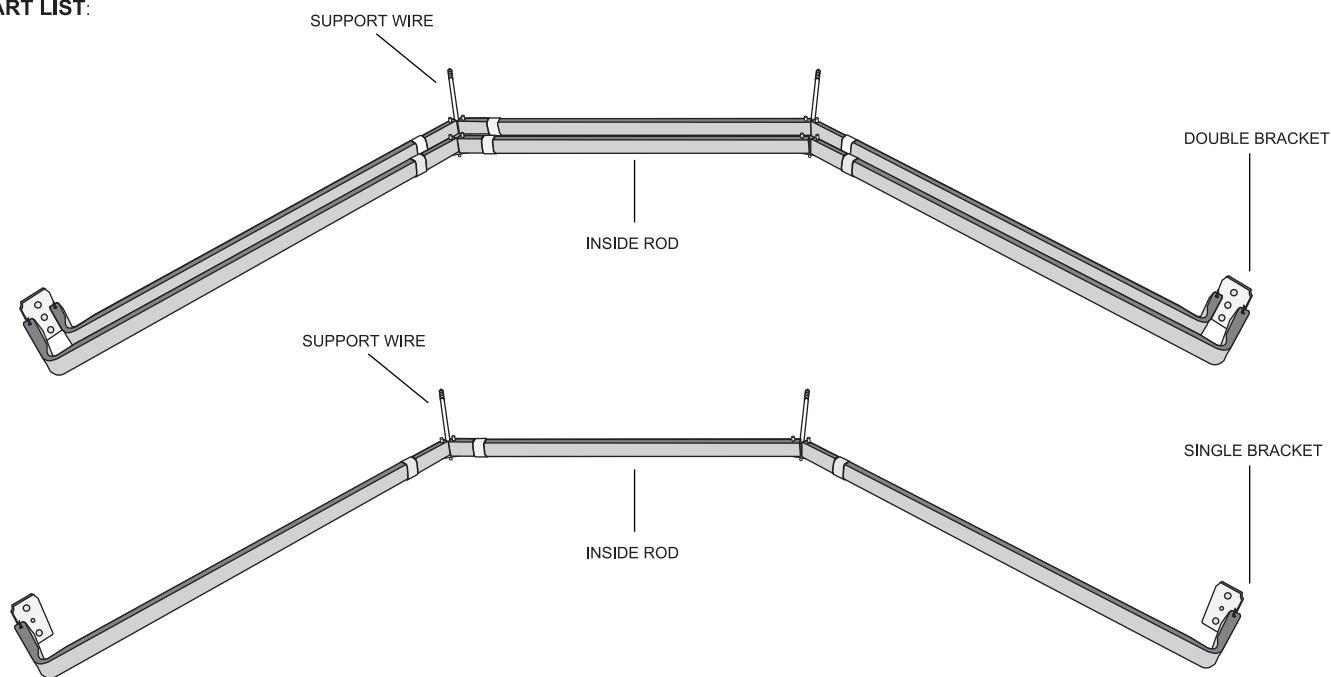
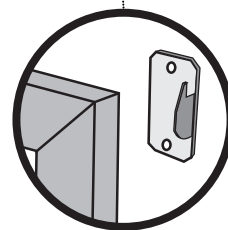
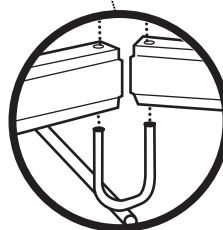


# INSTALLATION INSTRUCTIONS FOR BAY WINDOW CURTAIN RODS

## PART LIST:

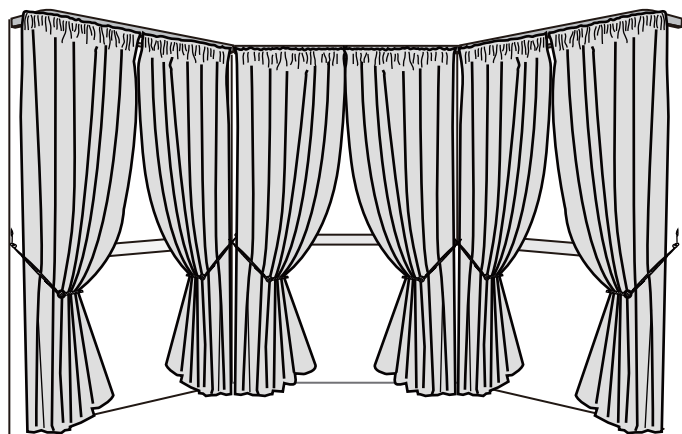

- 1 Mount Brackets to window casing with screws provided.
- 2 Drill 5/32" pilot hole and mount support wires to window.
- 3 Mount rod onto bracket
- 4 Mount rod onto support wire.

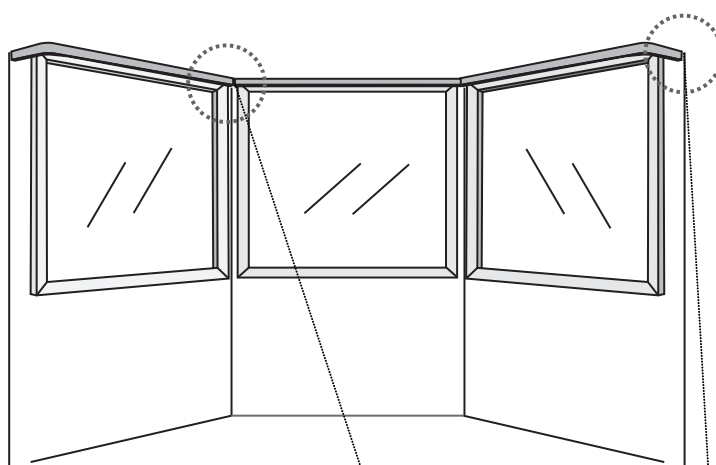

## DRYWALL ANCHOR INSTALLATION



If screws are going directly into wood trim or wall studs - drill 1/8" (3mm) holes and install screws through bracket. If screws are going into hollow wall - drill 3/16" (5mm) holes and push or lightly hammer plastic anchors into holes. Then install screws through brackets. Do not tighten screws too much - just snug is best.